

### COMPONENT INDEX


SYSTEM / COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO	SYSTEM / COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO
ELECTRIC WINDOW							
Window relay	Behind instrument panel	8					
GLOW PLUG CIRCUIT							
Fuse box (50 amp fuse)	Firewall	3					
Glow plug sensor	LH side of engine	4					
Glow plug timer	Driver's side, under dash	2					
INSTRUMENT CLUSTER							
Engine temperature sensor	Engine compartment	4					
SEAT BELT WARNING							
Seat belt warning unit	Driver's side, under dash	2					
TURN SIGNAL/HAZARD FLASHER							
Hazard switch and flasher	Between front seats						



- 1 - Heated re
- 2 - Windshield (interv



- 1 - Glow plug time
- 2 - Seat belt warni
- 3 - Combination sv
- 4 - Rear harness co

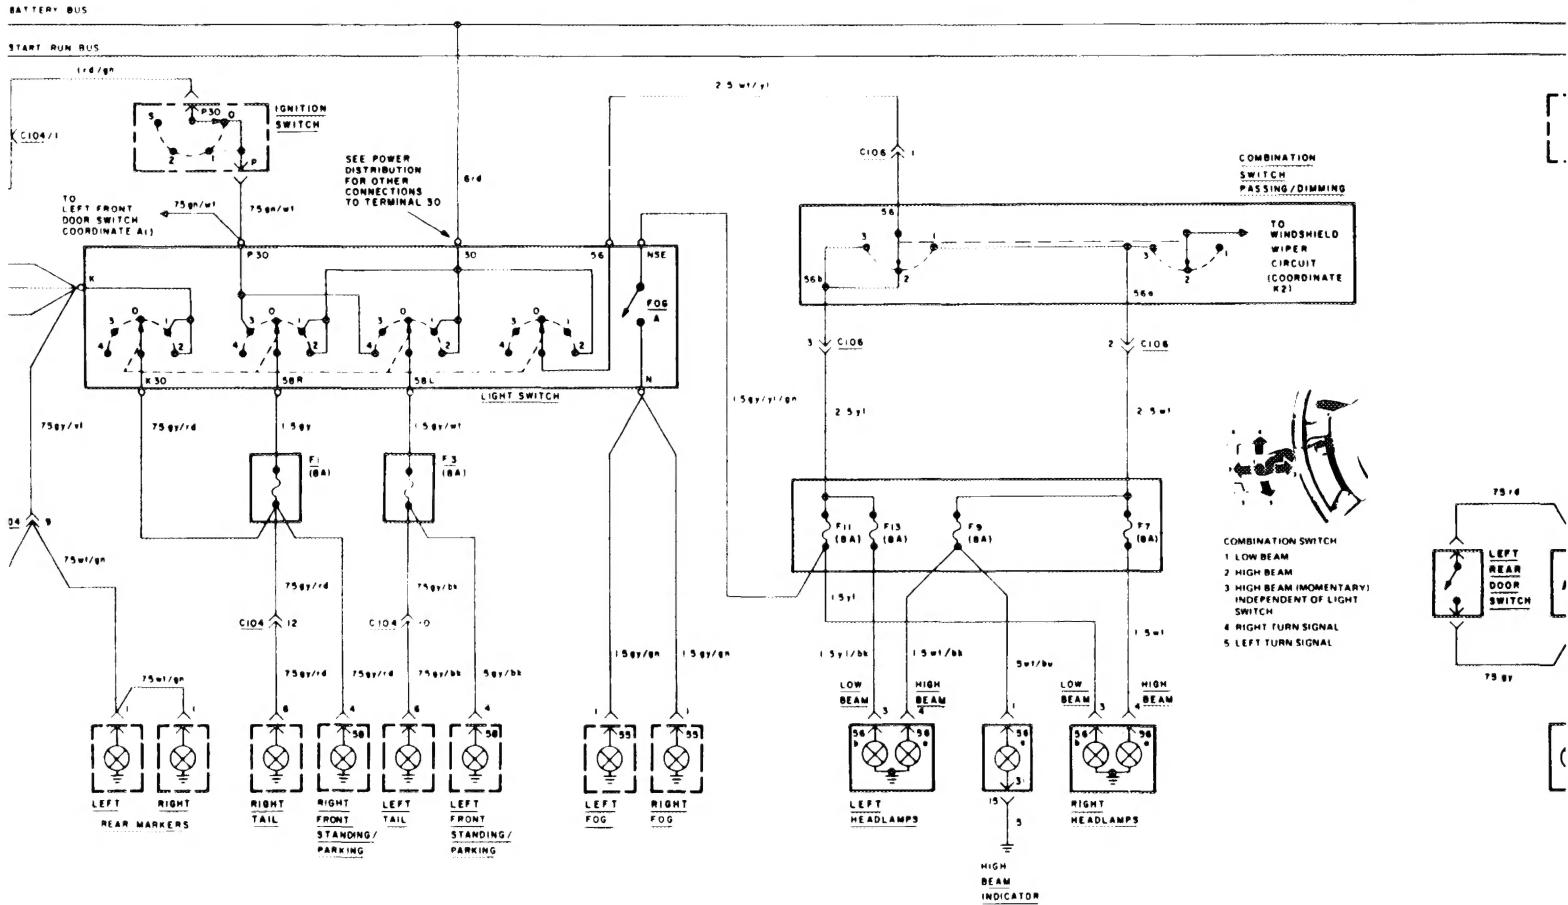

LOCATION FIGURES



Fig 1  
1 - Heated rear window relay  
2 - Windshield washer/wiper relay (interval wipe control)



Fig 2  
1 - Glow plug timer  
2 - Seat belt warning unit  
3 - Combination switch connector (C 106)  
4 - Rear harness connector (C 104)



Fig 3  
1 - 50 amp fuse box

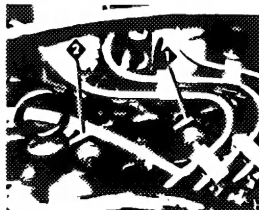


Fig 4  
1 - Engine temperature sensor  
2 - Glow plug sensor



Fig 5  
Temperature vacuum switch



Fig 6  
9 - A/C relay code 12  
9a - A/C relay no code  
13 - Auxiliary fan relay code 6

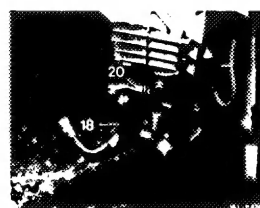


Fig 7  
18 - Refrigerant loss switch  
20 - Receiver/drier temperature switch



Fig 8  
1 - Electric window relay



Fig 9  
1 - Cruise control actuator


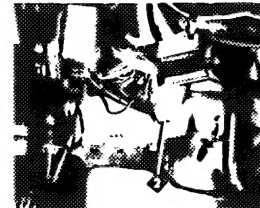


Fig 10  
2 - Cruise control amplifier

19

AIR CONDITION  
AUXILIARY FAN  
CHARGE  
CIGAR LIGHTER  
CLOCK  
COOLANT TEMP  
CRUISE CONTROL  
FUEL GAUGE  
GLOW PLUG  
HEATED REAR  
SEAT HEATER  
HORN  
KICKDOWN SOL  
LEIGHT CIRCUIT  
AIR CONDITI  
ASH TRAY  
BACKUP  
BRAKE  
BRAKE SYST  
BRAKE WEAR  
DOME (FRON  
DOME (REAR  
FOG  
GLOVE BOX  
HEAD  
INSTRUMENT  
LOW FUEL W  
MARKER  
PARKING  
PREGLOW  
STANDING  
TAIL  
TRUNK  
POWER ANTEN  
RADIO  
SEAT BELT WA  
SLIDING ROOF  
START  
TURN SIGNAL/  
WINDOWS  
WINDSHIELD W

POWER BUS DE  
SPECIAL GROU

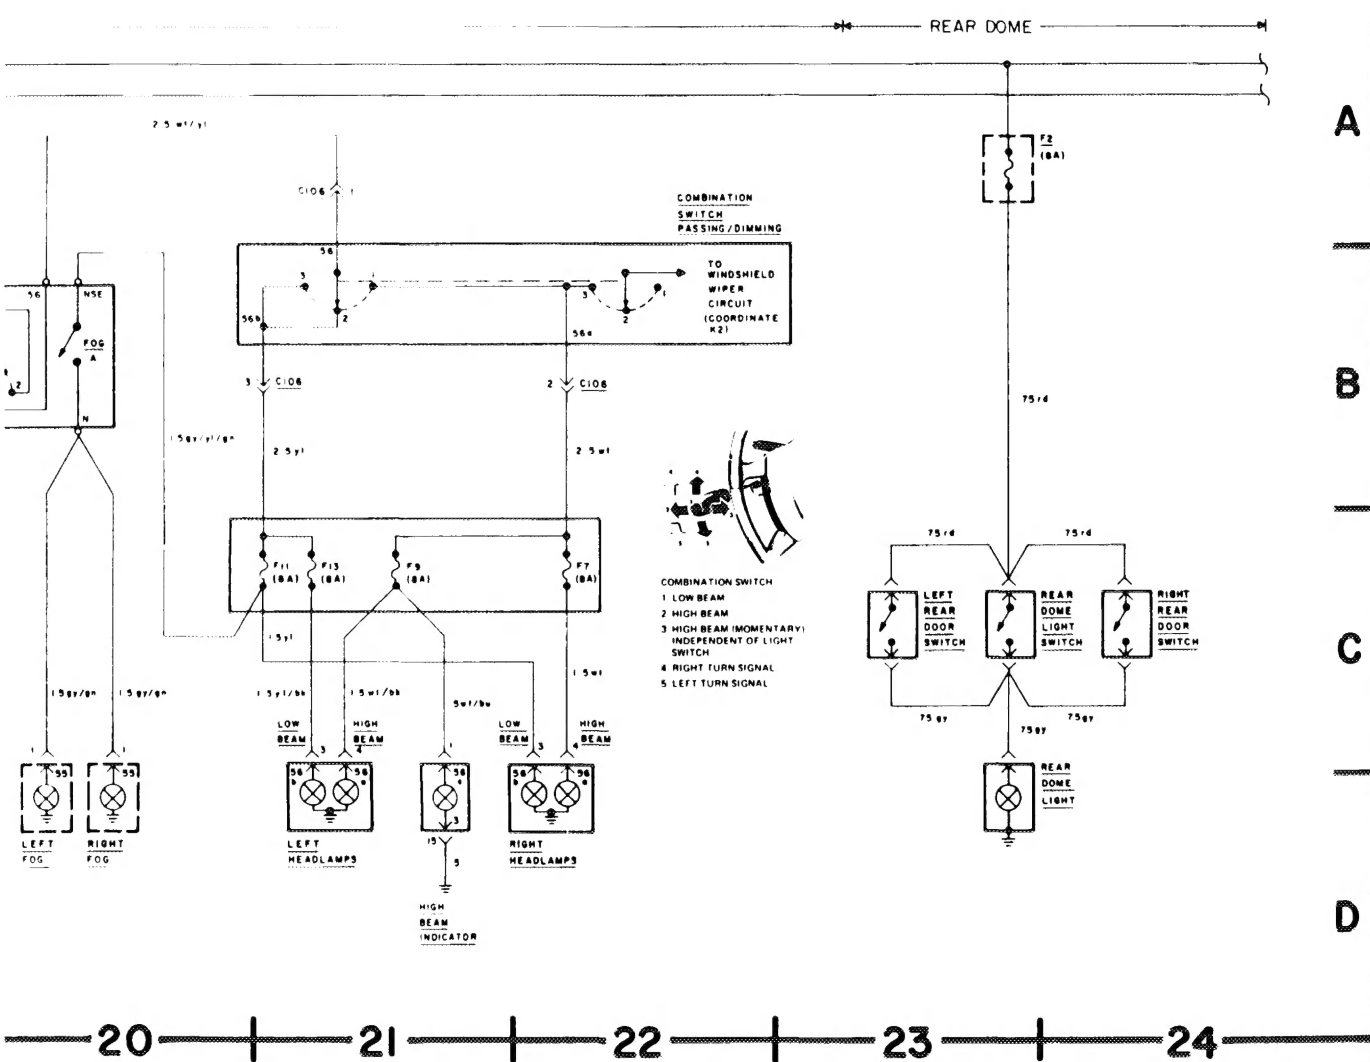

## LOCATION FIGURES

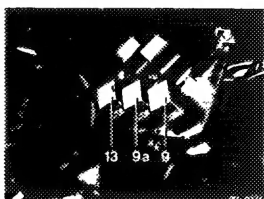


Fig 6  
9 - A/C relay I - code 12  
9a - A/C relay II - no code  
13 - Auxiliary fan relay - code 6



Fig 9  
1 - Cruise control actuator

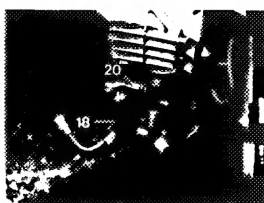


Fig 7  
18 - Refrigerant loss switch  
20 - Receiver/drier temperature switch

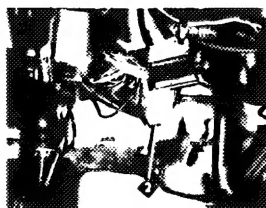



Fig 10  
2 - Cruise control amplifier









Fig 8  
1 - Electric window relay

## 1977 240D

 AIR CONDITIONING	L10
AUXILIARY FAN	K9
CHARGE	D4
CIGAR LIGHTER	K5
CLOCK	F12
COOLANT TEMPERATURE GAUGE	F12
CRUISE CONTROL	R3
FUEL GAUGE	F11
GLOW PLUG	B10
HEATED REAR WINDOW	S6
HEATED SEATS	P9
HEATER	K12
HORNS	B4
KICKDOWN SOLENOID	R6
LIGHT CIRCUITS	
AIR CONDITIONING	C16
ASH TRAY	K5
BACKUP	S7
BRAKE	S2
BRAKE SYSTEM WARNING	F9
BRAKE WEAR	F10
DOVE (FRONT)	G8
DOVE (REAR)	D23
FOG	D20
GLOVE BOX	L1
HEAD	D21
INSTRUMENT CLUSTER	F11
LOW FUEL WARNING	F11
MARKER	D18
PARKING	D19
PREGLOW	D9
STANDING	D19
TAIL	D18
TRUNK	G8
POWER ANTENNA	L8
RADIO	K6
SEAT BELT WARNING	C1
SLIDING ROOF	F1
START	D6
TURN SIGNAL/HAZARD FLASHER	B13
WINDOWS	G4
WINDSHIELD WIPER/WASHER	K2
POWER BUS DETAILS	J14
SPECIAL CIRCUITS	J16

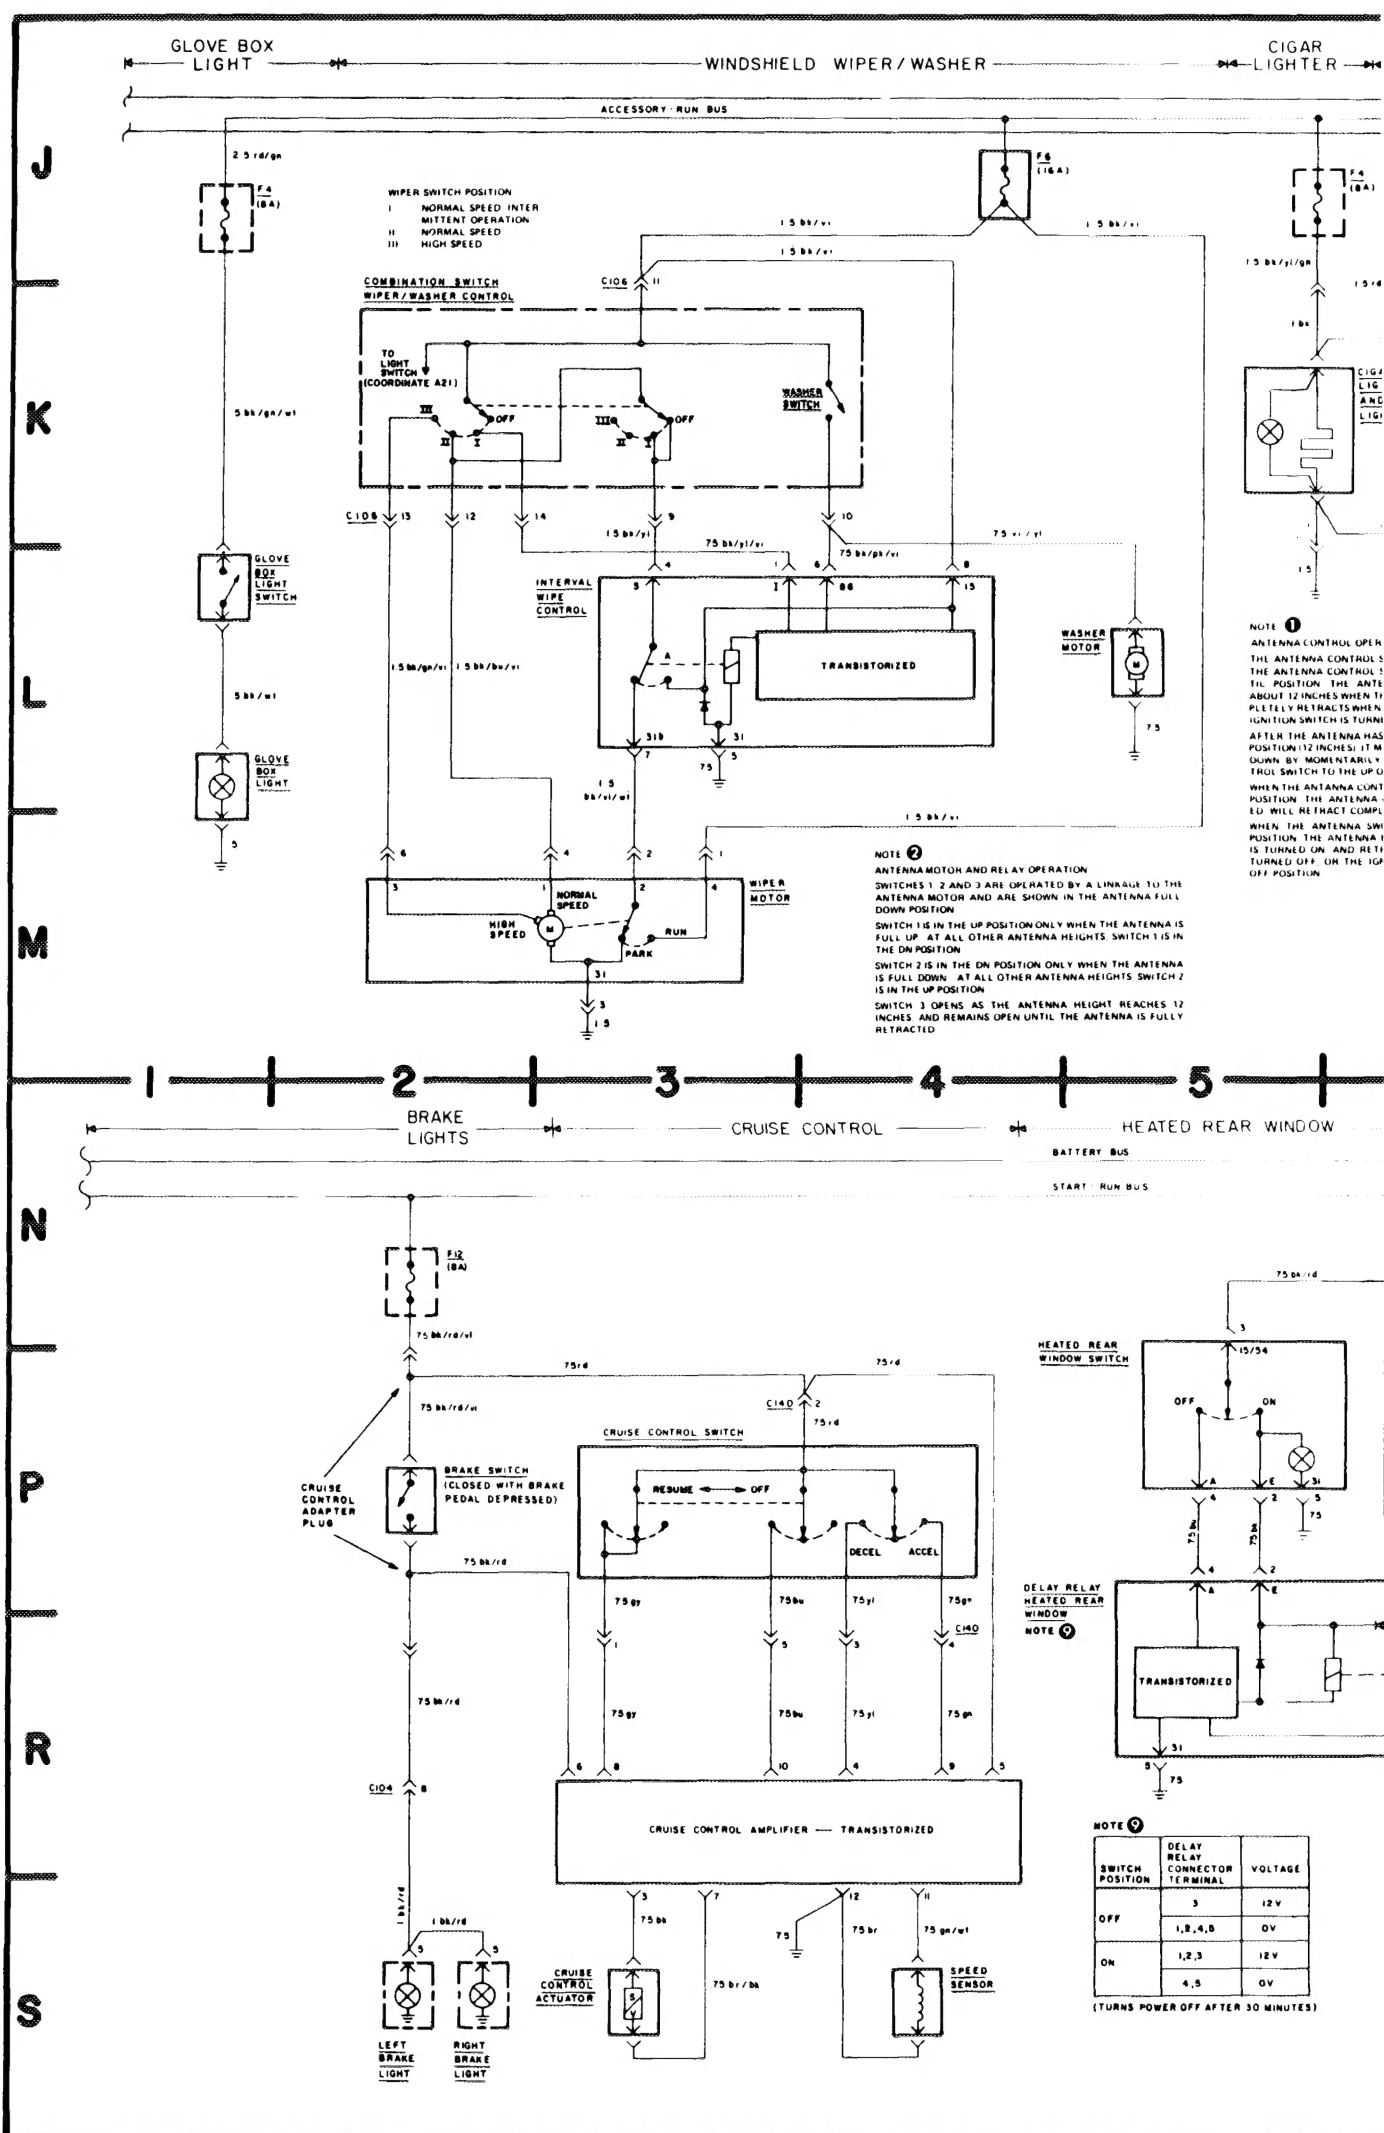

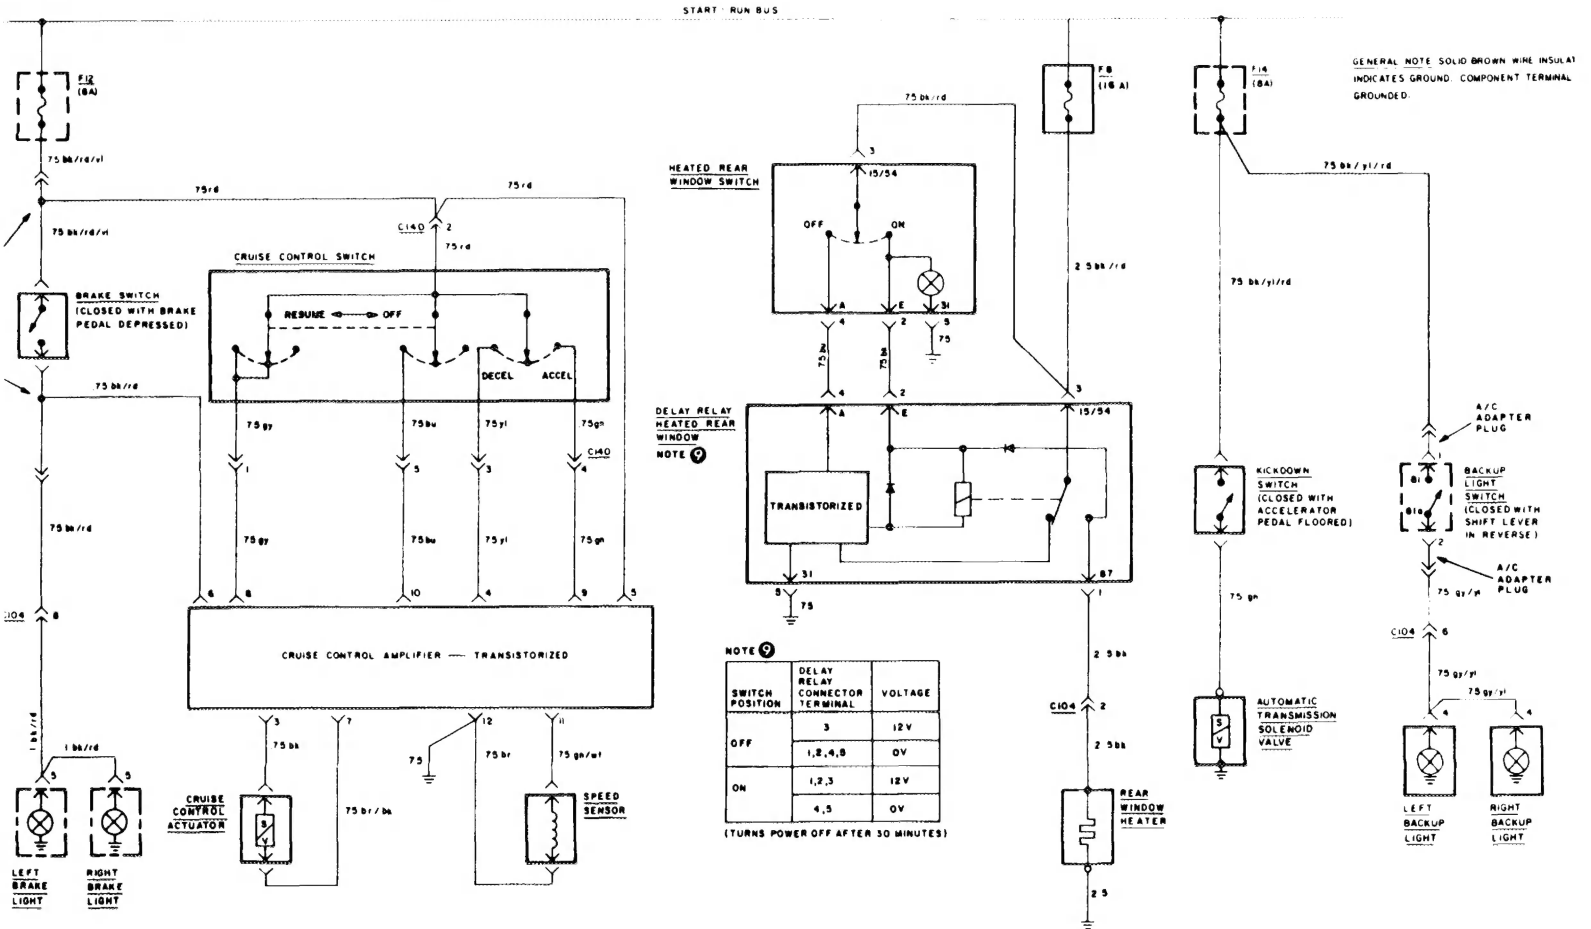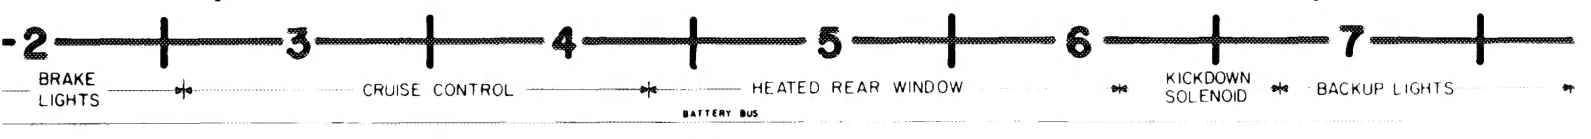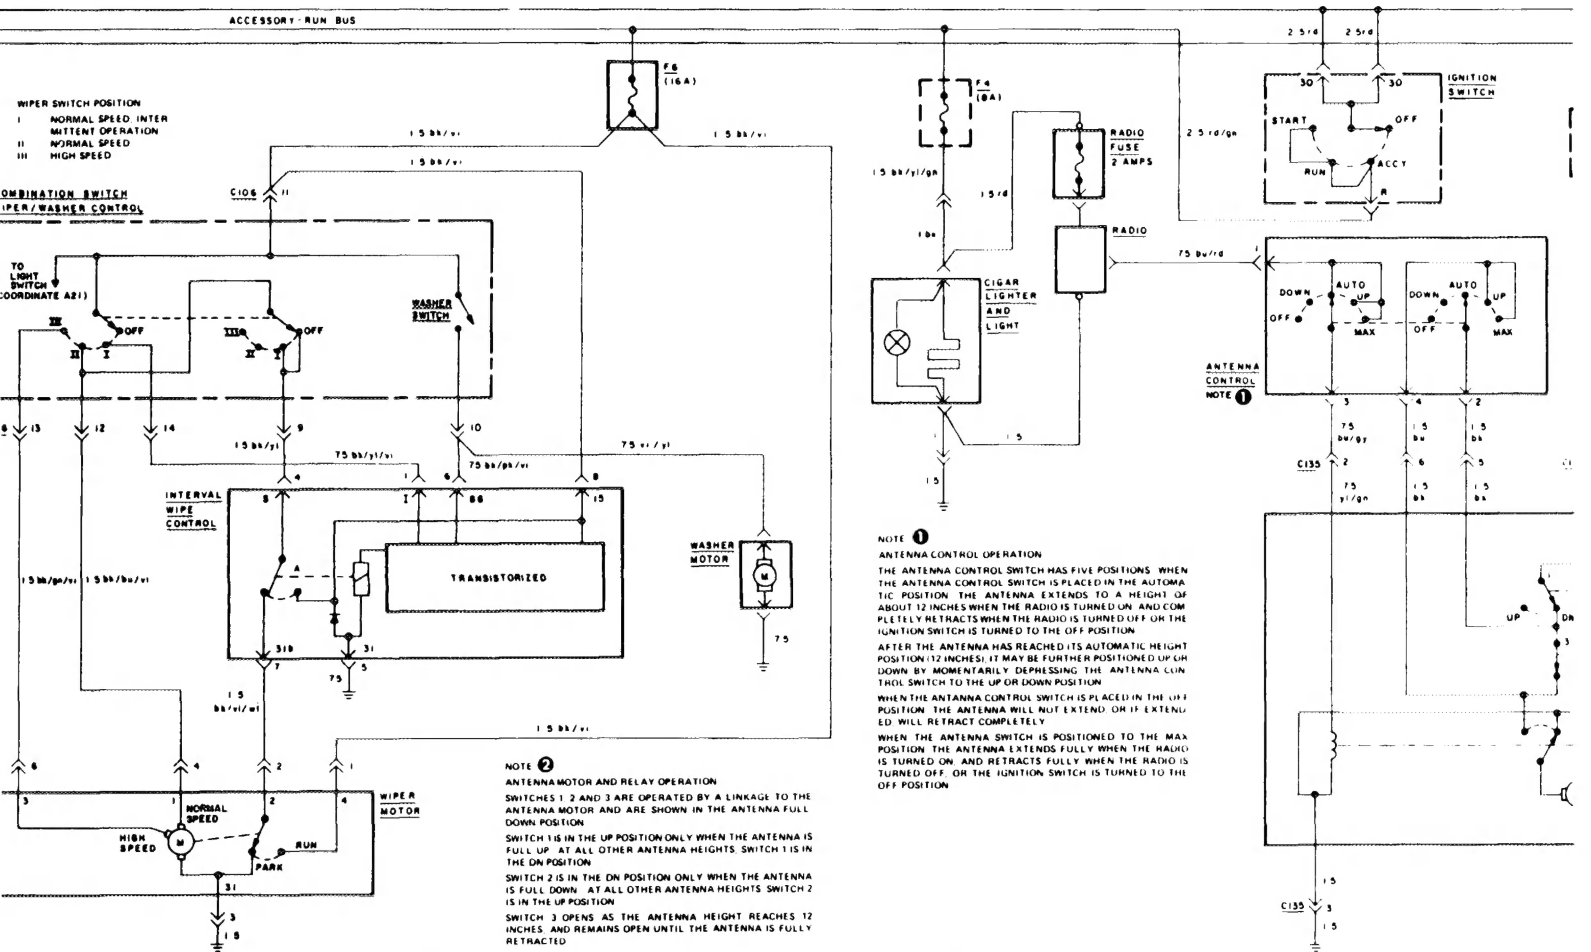


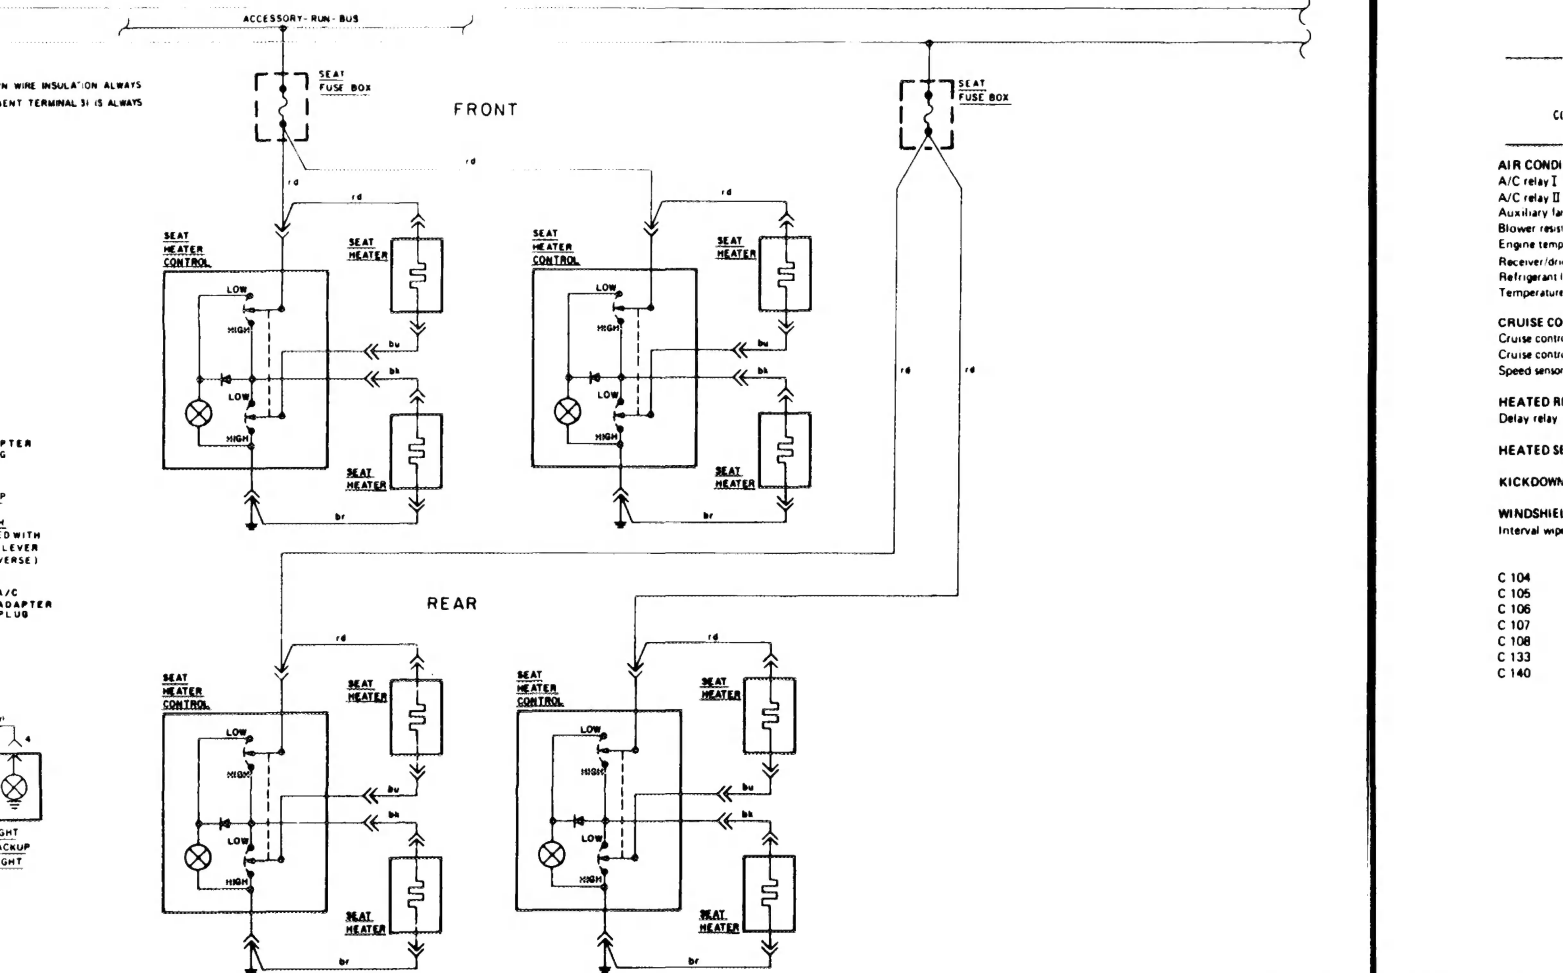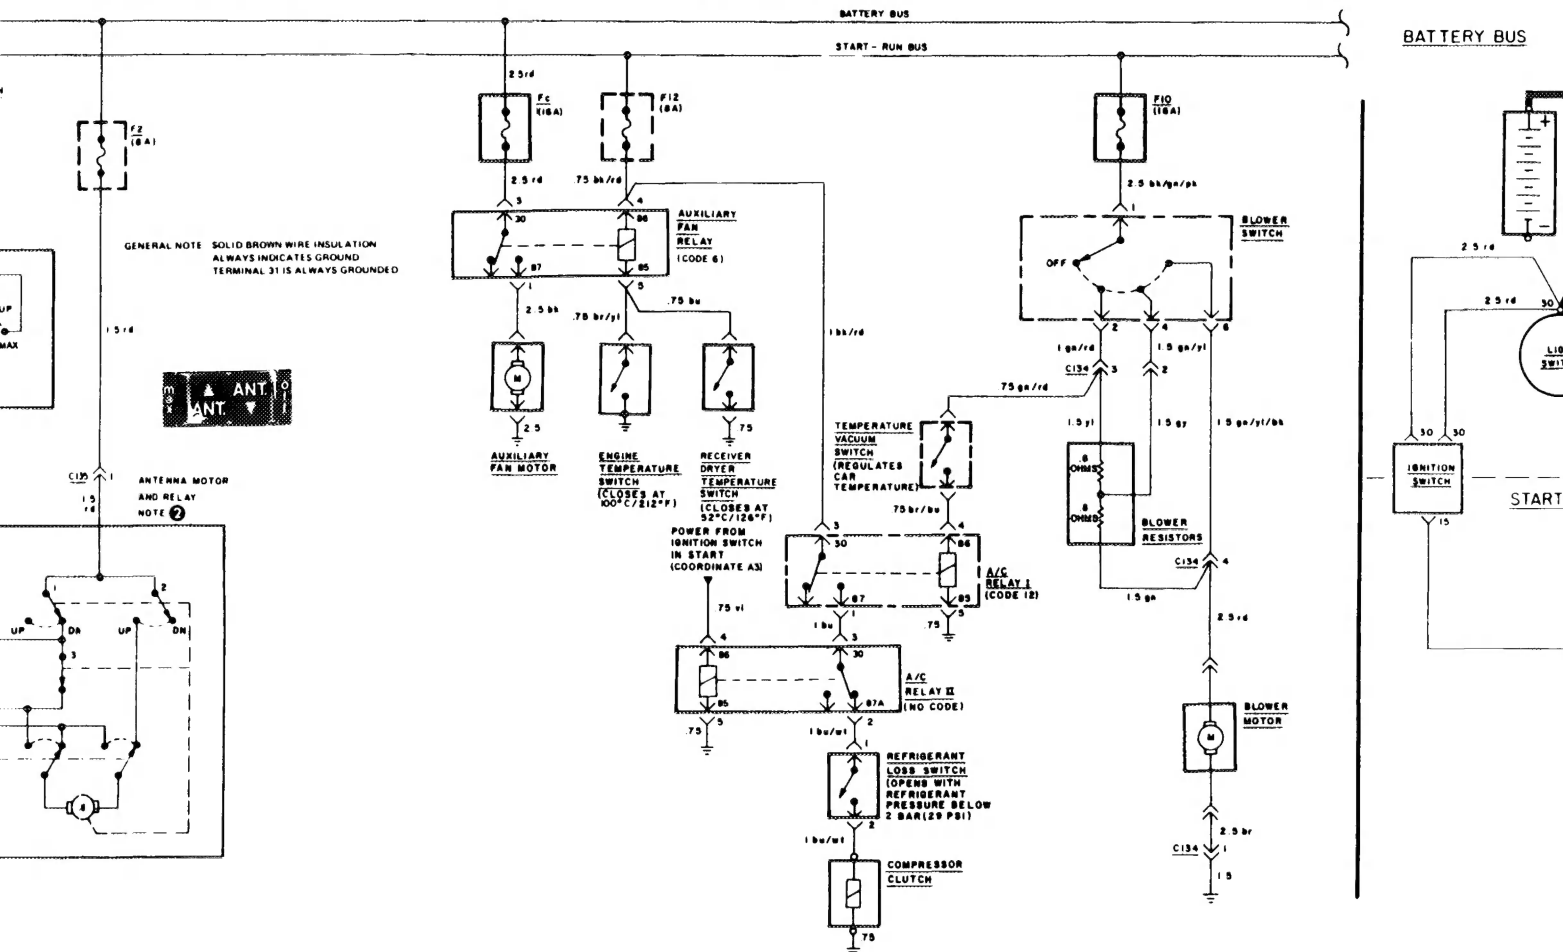

C 104  
C 105  
C 106  
C 107  
C 108  
C 133  
C 140



3US

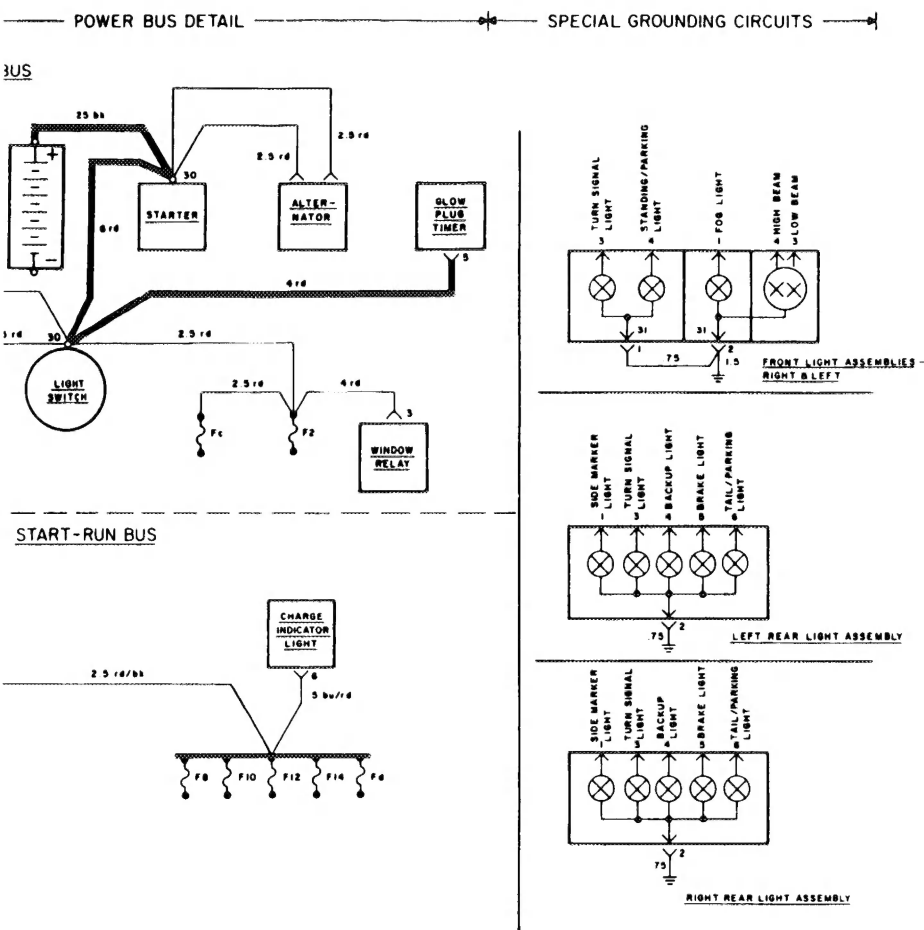

14 15 16 17 18 19

# COMPONENT INDEX

SYSTEM / COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO	SYSTEM / COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO
AIR CONDITIONER - HEATER							
A/C relay I - code 12	Front left of engine compartment	6					
A/C relay II - no code	Front left of engine compartment	6					
Auxiliary fan relay - code 6	Behind cruise control actuator	6					
Blower resistors	In plenum chamber	12					
Engine temperature switch	LH side of engine						
Receiver/drier temperature switch	On receiver/drier	7					
Refrigerant loss switch	On receiver/drier	7					
Temperature vacuum switch	Console	5					
CRUISE CONTROL							
Cruise control actuator	LH side of engine compartment	9					
Cruise control amplifier	Above brake pedal	10					
Speed sensor	Back of speedometer	11					
HEATED REAR WINDOW							
Delay relay	Behind instrument panel	1					
HEATED SEATS							
KICKDOWN SOLENOID	Under accelerator pedal						
WINDSHIELD WASHER/WIPER							
Interval wiper control	Behind instrument panel	1					
C 104	Under dash, driver's side	2	T23				
C 105	Firewall		T25				
C 106	Under dash, driver's side	2	T23				
C 107	Console (power window)		T2				
C 108	Console (power window)		T4				
C 133	Behind glove box		T24				
C 140	Firewall		T1				



Fig 11  
3 - Speed sensor

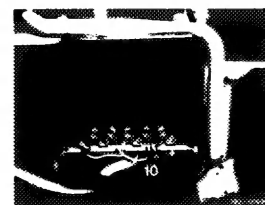


Fig 12  
10 - Blower resistors

J

K

L

M

19 20 21 22 23 24

## LOCATION FIGURES

## FUSE DATA

Fuse 1 (8 amps) License plate lights Rear marker lights Right front standing/parking light Right tail light	Fuse 12 (8 amps) Auxiliary fan relay code 6 Brake lights Compressor clutch Cruise control amplifier Instrument cluster Turn signal/hazard flasher
Fuse 2 (8 amps) Clock Front dome light Rear dome light Power antenna Turn light Turn signal/hazard flasher	Fuse 13 (8 amps) Left low beam
Fuse 3 (8 amps) Left front standing/parking light Left tail light	Fuse 14 (8 amps) Backup lights Glow plug timer Horn Kickdown solenoid Seat belt warning unit
Fuse 4 (8 amps) Cigar lighter and light Glove box light Window relay	Fuse a (16 amps) Left rear window Right front window
Fuse 5 (8 amps)	Fuse b (16 amps) Left front window Right rear window
Fuse 6 (16 amps) Windshield wiper/washer	Fuse c (16 amps) Auxiliary fan motor
Fuse 7 (8 amps) Right high beam	Fuse d (16 amps) Sliding roof
Fuse 8 (16 amps) Heated rear window	Glow plug fuse (50 amps) Glow plugs
Fuse 9 (8 amps) Left high beam	Heated seat fuse Heated front seat
Fuse 10 (16 amps) Blower motor	Heated seat fuse Heated rear seat
Fuse 11 (16 amps) Fog lights Right low beam	

## 1977 240D

AIR CONDITIONING	L10
AUXILIARY FAN	K9
CHARGE	D4
CIGAR LIGHTER	K5
CLOCK	F12
COOLANT TEMPERATURE GAUGE	F12
CRUISE CONTROL	R3
FUEL GAUGE	F11
GLOW PLUG	B10
HEATED REAR WINDOW	S6
HEATED SEATS	P9
HEATER	K12
HORNS	B4
KICKDOWN SOLENOID	R6
LIGHT CIRCUITS	
AIR CONDITIONING	C16
ASH TRAY	K5
BACKUP	S7
BRAKE	S2
BRAKE SYSTEM WARNING	F9
BRAKE WEAR	F10
DOVE (FRONT)	G8
DOVE (REAR)	D23
FOG	D20
GLOVE BOX	L1
HEAD	D21
INSTRUMENT CLUSTER	F11
LOW FUEL WARNING	F11
MARKER	D18
PARKING	D19
PREGLOW	D9
STANDING	D19
TAIL	D18
TRUNK	G8
POWER ANTENNA	L8
RADIO	K6
SEAT BELT WARNING	C1
SLIDING ROOF	F1
START	D6
TURN SIGNAL/HAZARD FLASHER	B13
WINDOWS	G4
WINDSHIELD WIPER/WASHER	K2
POWER BUS DETAILS	J14
SPECIAL GROUNDING CIRCUITS	J18